


Packing List

Qty	ETI P/N	Description
1	23483	ADH NETCOM NEMA Automatic Dehydrator, AC Power Supply
1	23526	ADH NETCOM Instruction Manual
1	23481	ADH NETCOM NEMA Installation Sheet (this document)
1	18198	1/8" NPT to 1/4" Barbed Brass Fitting
1	23428	1/8" NPT to 3/8" Barbed Brass Fitting
1	23571	Exhaust Muffler, 1/8" NPT, Bronze

Connections

1. Connect feed hose to 1/8" NPT outlet using 1/4" or 3/8" barbed fitting supplied.
2. Connect required data and alarm relay ports. RS-422 and RS-232 ports may require configuration changes via the web interface. See Instruction Manual for more information.
3. (Optional) The unit comes with a filter/moisture dispersing element attached to the moisture drain line. If directed drainage is desired, remove filter and replace with a 1/8" NPT fitting and tubing/hosing to the drainage location of choice.
Note: The ADH NETCOM NEMA is permanently connected equipment and does not have an internal disconnect device. A readily accessible disconnect device, and short circuit and current protection, shall be provided and are not supplied by Environmental Technology. When power is applied, the system will start.
4. Connect AC power. System can be connected to 100 VAC – 240 VAC power without requiring any configuration change.

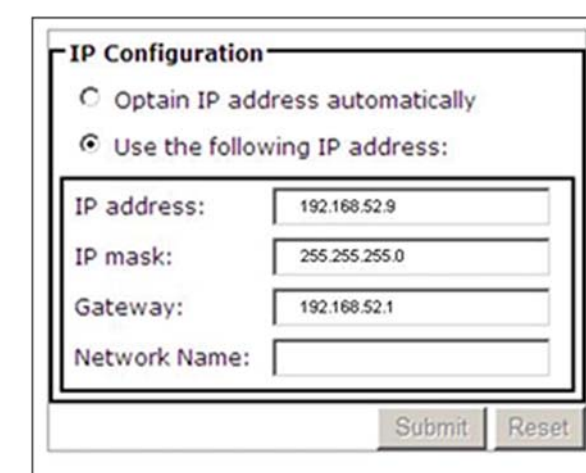

Communicating With the Dehydrator


Note: Your Information Technology Department is the best source of information if you encounter problems or difficulties in connecting to or communicating with the dehydrator.

1. Temporarily assign computer an IP address in the 192.168.52.0 network range, typically 192.168.52.1, with the subnet 255.255.255.0
2. Connect the dehydrator to your computer either directly or through a network. For direct connections a cross-over cable or switch may be required for connecting to an older computer; an Ethernet patch cable will work in most other cases.
3. Open a web browser and connect to web interface at HTTP://192.168.52.9

Configuring IP Address

1. Go to Configuration page
2. If using a fixed IP address, select "Use the following IP address:" Then set the IP address, mask and gateway.
3. If using DHCP, select "Obtain IP address automatically."
4. Click Submit. You should see a message that the dehydrator is rebooting.


Note: After changing the IP address of you dehydrator to a network other than the default 192.168.52.0 you will not be able to access the dehydrator from the configuring computer unless that computer is reconfigured for the newly assigned network address.

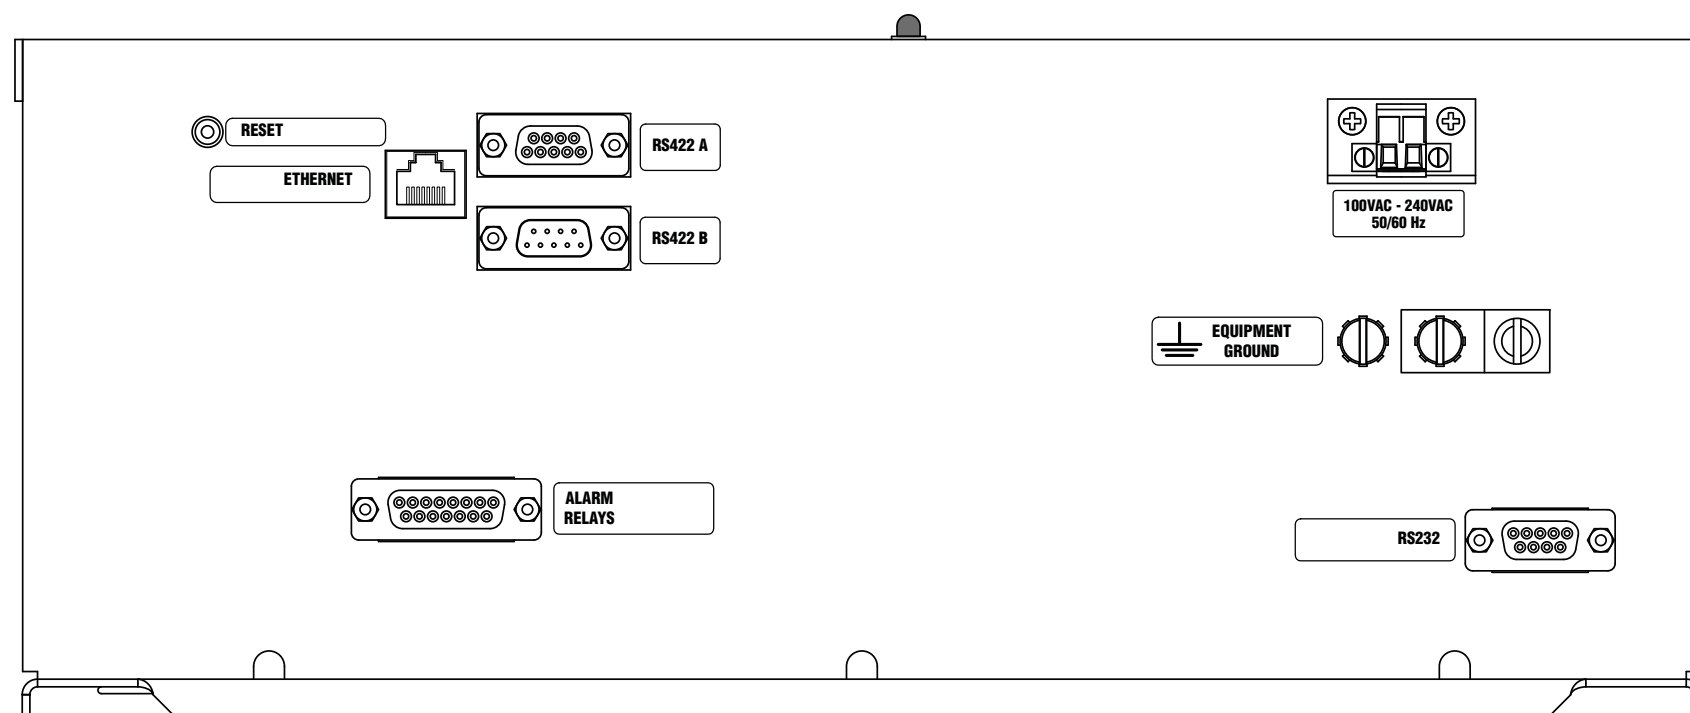

Mounting Orientation


Select a suitable mounting area, 24" x 26" x 10" deep (610mm x 660mm x 250mm deep). Ensure the mounting surface and hardware are suitable to support a static load of approximately four times the

weight of the unit, or 100 pounds (45 kg). Use four appropriate 5/16" mounting hardware to fasten the unit and ensure stable mounting. The NEMA 4X enclosure shall be mounted in an orientation with hinges to the left, hinges to the top, or the enclosure mounted feet down.

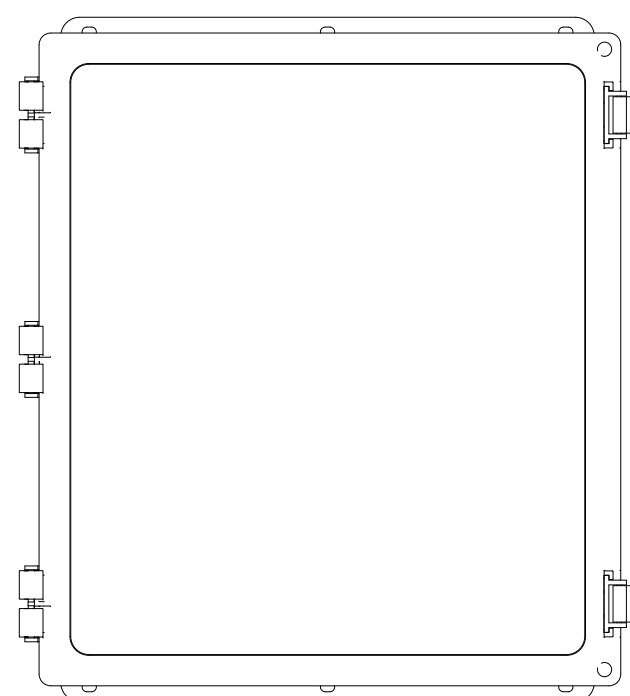


Vertical Mounting (preferred)

The ADH NETCOM NEMA preferred orientation for installation is mounted upright so that the door opens to the left.

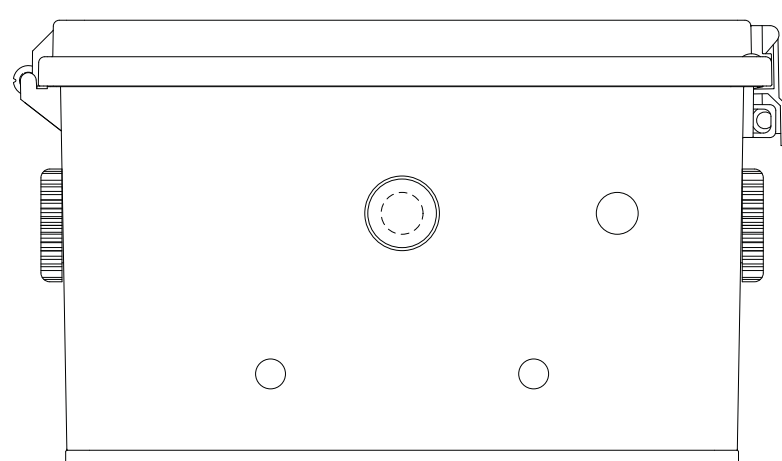


Shelf Mounting

Optionally, the ADH NETCOM NEMA may be shelf mounted flat so that the door opens up.

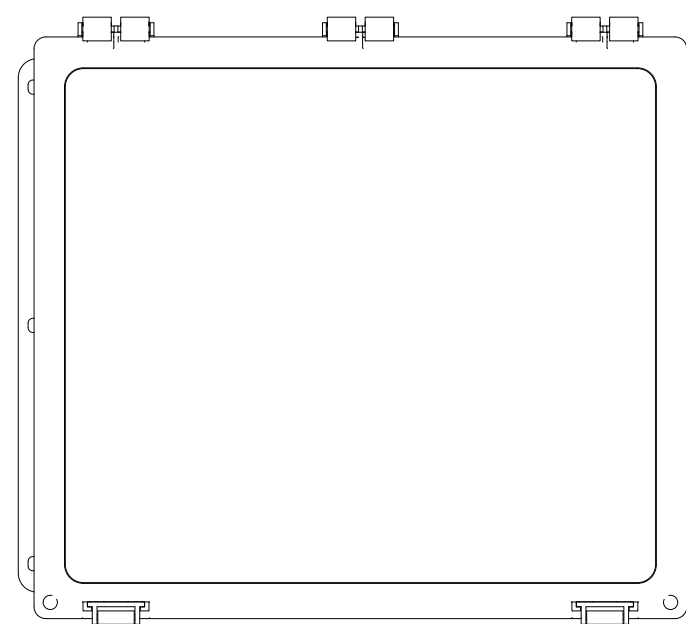

Horizontal Mounting

Optionally, the ADH NETCOM NEMA may be mounted horizontally so that the door opens up. This is the least preferred method and may result in reduced performance.

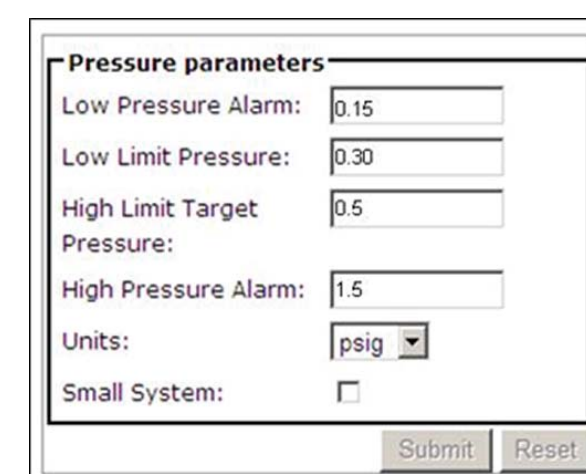

Configuring Pressure

1. Using a web browser, connect to the dehydrator. Go to the Configuration page
2. Using the Units pull-down select English (PSI) or SI (mbar).
3. To change the operational pressure setting enter the following:
 - Low Alarm - The pressure at which Low Pressure will cause an alarm condition.
 - Low Limit - The low set point at which the unit will start pumping.
 - High Limit - The high set point at which the unit will stop pumping.
 - High Alarm - The pressure at which High Pressure will cause an alarm condition.
4. Click submit.

Questions & Comments

For technical help, questions or comments concerning this product or any Environmental Technology, Inc. product contact:

Customer Service 8:00 a.m. - 5:00 p.m. EST.
 Voice: (800) 234-4239 USA & Canada or
 (574) 233-1202 elsewhere
 Fax: (888) 234-4238 USA & Canada or
 (574) 233-2152 elsewhere
 Email: info@networketi.com
 Web: <http://www.networketi.com>

DISCLAIMER

Environmental Technology, Inc. makes no representations or warranties, either expressed or implied, with respect to the contents of this publication or the products that it describes, and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. Environmental Technology, Inc. reserves the right to revise this publication, and to make changes and improvements to the products described in this publication, without the obligation of Environmental Technology, Inc. to notify any person or organization of such revisions, changes or improvements.