

QUICK-REFERENCE INSTALLATION GUIDE



NETCOM[®] MODEL ASM-1

SMART MANIFOLD WITH AC POWER SUPPLY

PACKING LIST



QTY.	PART NO.	DESCRIPTION
1	23658	ASM-1 Smart Manifold, AC Power Supply
1	23681	ASM-1 Smart Manifold Installation Sheet (this document)
1	23678	ASM-1 Accessory Kit
2	18198	1/8" NPT to 1/4" Barbed Brass Fitting
2	23428	1/8" NPT to 3/8" Barbed Brass Fitting
4	23245	Mounting Bracket
1	17618	Power Cord
8	11040	Rack-mounting screw (#8-32)
8	10641	#8 Split Washer

CONNECTIONS

Ports are factory configured as: Port 1 - Input; Ports 3 and 4 - Outputs; Port 8 - Bleed Valve. Ports 2, 5, 6, and 7 are factory configured as Unused. Settings may be changed, but use these initially.

1. For the dehydrator, connect a 1/8" NPT to 3/8" fitting to Input Port 1 using Teflon thread tape.
2. For the equipment lines, connect fittings as needed to Output Ports 3 and 4 using Teflon thread tape. Refer to Instruction Manual for more information.
3. Connect required data and alarm relay ports. RS-422 and RS-232 ports may require configuration changes via the web interface. See Instruction Manual for more information.
4. Connect AC power cord. System can be connected to 100 VAC - 240 VAC power without requiring any configuration change.
5. Configure Smart Manifold as described on this Installation Sheet, then shut off Manifold power.
6. Configure system dehydrator(s) as needed. Turn Smart Manifold power back on.


QUICK-REFERENCE INSTALLATION GUIDE

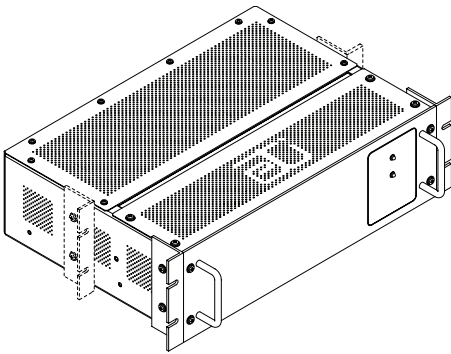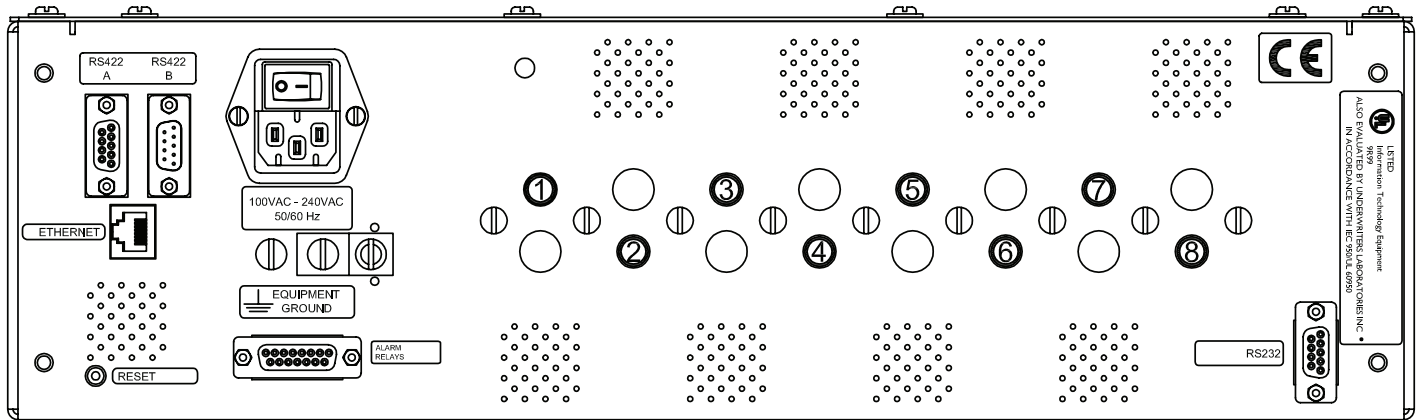

RACK MOUNTING

The Smart Manifold provides positions for flush-mounting (for dual-post racks and enclosures) or center-mounting (for single-post racks).


If using mounting rails (not supplied), do not install the mounting brackets.

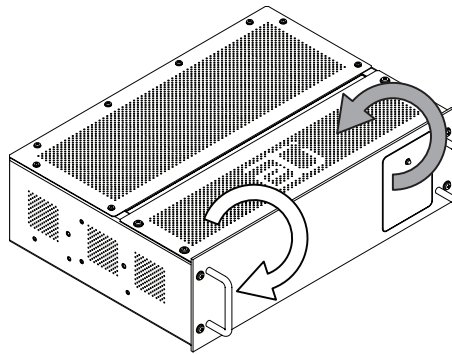

WALL MOUNTING CONFIGURATION

To configure the dehydrator for wall mount installation, remove the front panel and the portion of the vented cover with the ETI logo.

Reinstall the front panel so that it will be in the new front position once the dehydrator is positioned for wall mounting. Reinstall the small vented panel so that it will be in the new bottom position.

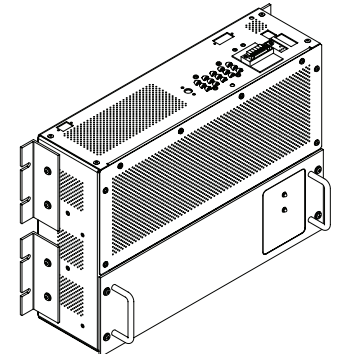

WALL MOUNTING

Ensure the mounting surface and hardware are suitable to support a static load of approximately four times the weight of the unit, or 44 pounds (20 kg). Use four appropriate 5/16" mounting hardware to fasten the unit and ensure stable mounting. The Smart Manifold is equipped with four brackets for wall mounting.

QUICK-REFERENCE INSTALLATION GUIDE


CONFIGURING THE SMART MANIFOLD SYSTEM

Consult your System Administrator or IT Department for information regarding connecting to or communicating with the Smart Manifold. The ASM - 1 Smart Manifold Ethernet communications run at 10Base-T data rate and half duplex. It is recommended that the network interface to the ASM - 1 Smart Manifold is manually set to these parameters and NOT to an autoconfigure mode.


Connect the ADH NETCOM dehydrator(s) and equipment lines after configuration so the system does not go on and off while configuring. Refer to the help screens. Factory settings reflect most installations and might not be the best settings for your needs. Use the default settings initially, then change settings as desired for your own requirements.

It should be noted that both the smart manifold and Netcom have the same default IP address (192.168.52.9). In order for them to work together they will each need to be reconfigured to IP address's that fall within the system


set up by the IT administrator. The Netcom address will need to be configured into the smart manifold so it can monitor and control the dehydrator. Consult the user's manual for more details.

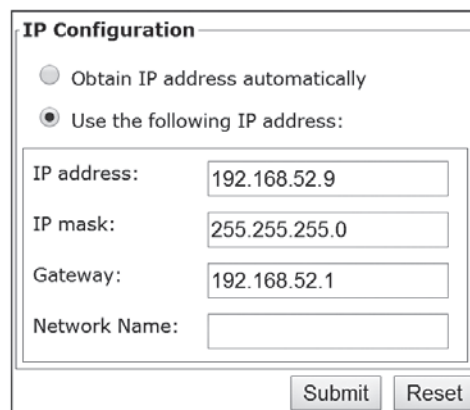

The IP Configuration screen has two radio buttons at the top: 'Obtain IP address automatically' (unselected) and 'Use the following IP address:' (selected). Below these are four input fields: 'IP address:' with the value '192.168.52.9', 'IP mask:' with '255.255.255.0', 'Gateway:' with '192.168.52.1', and 'Network Name:' which is empty. At the bottom right are 'Submit' and 'Reset' buttons.

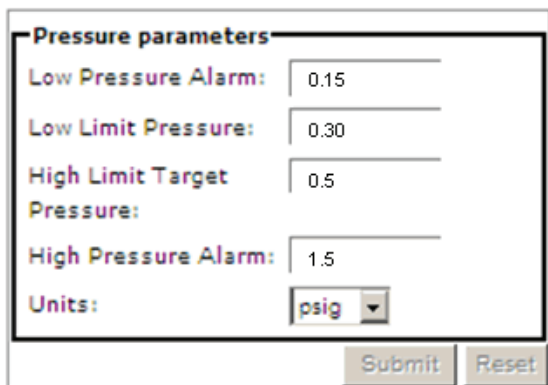

The Pressure parameters screen displays five input fields: 'Low Pressure Alarm:' (0.15), 'Low Limit Pressure:' (0.30), 'High Limit Target Pressure:' (0.5), 'High Pressure Alarm:' (1.5), and 'Units:' (a dropdown menu showing 'psig'). 'Submit' and 'Reset' buttons are at the bottom right.

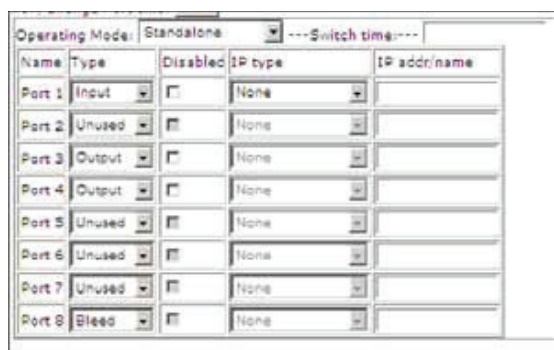

The Operating Mode screen shows a dropdown menu set to 'Standalone' and a 'Switch time' field. Below is a table with 8 rows and 5 columns: Name, Type, Disabled, IP type, and IP addr/name.

Name	Type	Disabled	IP type	IP addr/name
Port 1	Input	<input type="checkbox"/>	None	
Port 2	Unused	<input type="checkbox"/>	None	
Port 3	Output	<input type="checkbox"/>	None	
Port 4	Output	<input type="checkbox"/>	None	
Port 5	Unused	<input type="checkbox"/>	None	
Port 6	Unused	<input type="checkbox"/>	None	
Port 7	Unused	<input type="checkbox"/>	None	
Port 8	Bleed	<input type="checkbox"/>	None	

1. Using an Ethernet cable, connect to the Smart Manifold from a PC. A cross-over cable or switch is recommended. With a web browser, call up Smart Manifold using the IP address 192.168.52.9.
2. From the Main Page, select Configuration.
3. Select Show/Change Port Info, then confirm settings. See Instruction Manual for details.
4. Select Redundant, Parallel, or Standalone based on screen prompts. With ADH NETCOM dehydrator(s), use Redundant or Parallel. Press Submit to enter the settings.
5. From the Configuration Page, select Pressure Limits and confirm settings with your System Administrator. Change settings if desired, then press Submit.
6. On the IP/Serial Information page, set IP address or network name. Obtain Mask and Gateway settings from System Administrator. Note settings, then shut off Smart Manifold.

SYSTEM SET-UP

1. Connect equipment lines to Smart Manifold, then dehydrator(s). See Connections section. Leave power switches OFF and plug each device into surge-protecting power strips.

QUICK-REFERENCE INSTALLATION GUIDE

2. Connect to the dehydrator(s) and change dehydrator IP address(es) as needed. Perform Reset Procedure as described in Instruction Manual if needed and change dehydrator IP address to 192.168.52.9, then complete configuration. Configure each dehydrator as entered on Smart Manifold Port Info page.
3. Following configuration of each dehydrator, turn Smart Manifold power back on and begin system operation. Contacting Customer Service

For technical help, questions or comments concerning this product or any ETI product contact Customer Service 8:00 a.m. - 5:00 p.m. EST.

Email: info@networketi.com

Web: networketi.com

Mail: ETI
1850 North Sheridan Street
South Bend, IN 46628

LIMITED WARRANTY

ETI's two year limited warranty covering defects in workmanship and materials applies. Contact Customer Service for complete warranty information.

DISCLAIMER

ETI makes no representations or warranties, either expressed or implied, with respect to the contents of this publication or the products that it describes, and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. ETI reserves the right to revise this publication, and to make changes and improvements to the products described in this publication, without the obligation of ETI to notify any person or organization of such revisions, changes or improvements.